


# TempMinder® MRI-333MX - Instruction Manual

Thank you for the purchase of your new TempMinder® 4-Zone Temperature and Humidity Station. Please use the instructions below to setup this device.

## Initial Setup

1. Insert the stand into the bottom of the monitor.
2. Remove battery cover and insert 2 "AAA" batteries. Once the batteries are inserted, you have 3 minutes to complete steps 3 and 4. Don't worry if you run out of time. It's easy to start over!
3. Remove back cover of each white remote transmitter.
4. Confirm each remote sensor is set to a different channel (1, 2 or 3), then install 2 "AA" batteries into each transmitter.

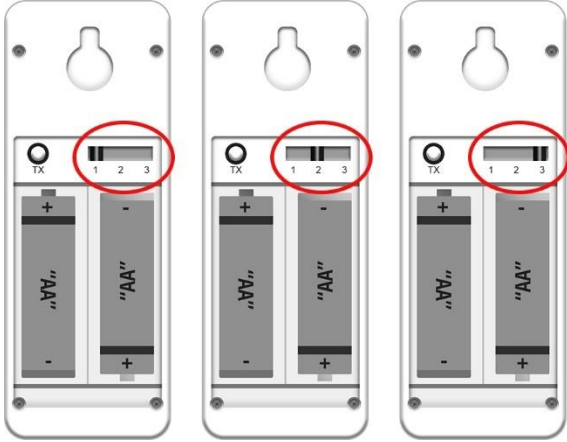

5. Once the batteries are inserted into the remote transmitters, the red light will turn on. Once the red light disappears, the temperature and humidity reading of that transmitter will be displayed on the monitor.
6. Use the **CF** button to toggle between your desired unit of temperature (°F or °C).

## Setting Date and Time


1. Press and release the **SET** button on the rear of the monitor. Once pressed, the year will be blinking.
2. Use the **UP** or **DOWN** buttons to select the **current** year.
3. Once the year is set, press and release the **SET** button again. The month will now be blinking.
4. Use the **UP** and **DOWN** buttons to select the current month.
5. Once the month is set, press and release the **SET** button. The date will now be blinking.
6. Use the **UP** and **DOWN** buttons to select the current date.
7. Once the date is set, press and release the **SET** button. The hour will now be blinking.
8. Use the **UP** and **DOWN** buttons to select the current hour.
9. Once the hour is set, press and release the **SET** button. The minutes will not be blinking.
10. Use the **UP** and **DOWN** buttons to select the current minutes.
11. Once the minutes are set, press and release the **SET** button. "12 Hr" will now be blinking.
12. Use the **UP** and **DOWN** buttons to toggle between 12-hour and 24-hour time. Pressing **SET** will confirm all date and time changes.

## Setting the Alarm

1. Press and hold the **ALARM** button until the hour is flashing, and **AL** is displayed between the hour and the minutes.
2. Use the **UP** and **DOWN** buttons to set the alarm's hour.

3. Once the alarm's hour is set, press and release the **ALARM** button to set the minutes.
4. Use the **UP** and **DOWN** buttons to set the alarm's minutes. Once set, press and release the **ALARM** button and you will be returned to the current time.

## Turn the Alarm On/Off

Press and release the **ALARM** button twice. Note the  icon will be displayed when the alarm is on.

## Snooze

Press and release the **SNZ** button to initiate the 5-minute snooze.

## Display MAX/MIN Temperature and Humidity

1. Press and release the **MEM** button to display the maximum temperature and humidity. Note the **MAX** on the display.
2. Press and release the **MEM** button again to display the minimum temperature and humidity. Note the **MIN** display.
3. Press and release the **MEM** button to display the current temperature and humidity. Note that neither **MAX** nor **MIN** are displayed.

## Clear MIN/MAX Temperature and Humidity

Press and hold the **MEM** button for 6 seconds to clear the MAX/MIN temperature and humidity readings.

## Replacing Transmitter Batteries / Receive New Readings

1. Press and release the **CH** button. Once pressed, you will see CH1 flashing on the display. To move from channel to channel, press and release the **CH** button.
2. To clear a channel, navigate to the channel you would like to clear (CH1, CH2, or CH3), then press and hold the **CH** button for 6 seconds.
3. After 6 seconds, you will see dashes on the display in the corresponding channel.

## Specifications

Batteries - Monitor	2 "AA" Batteries (Not Included)
Batteries - Remote Transmitters	6 "AAA" Batteries (Not Included)
Indoor Temperature Range	32°F - 122°F (-10°C - 50°C)
Outdoor Temperature Range	-22°F - 158°F (-50°C - 70°C)
Indoor and Outdoor Humidity Range	20% - 90%
Battery Life	9 to 14 months with Alkaline Battery; 2 to 3 years with Lithium Battery
Temperature Accuracy	+/- 2.5°F (1.5°C)
Warranty	1 Year Limited Warranty

**Warranty:** This product is guaranteed against manufacturing defects (not including batteries) for a period of one year. Should it fail, return it to the address below with a copy of your receipt.

### TempMinder®

3000 SE Waaler Street  
Stuart, FL 34997 USA  
+1 (772) 463-6522

[info@MinderResearch.com](mailto:info@MinderResearch.com)  
[www.MinderResearch.com](http://www.MinderResearch.com)

©2019 Minder Division of Valterra Products, LLC.